



4

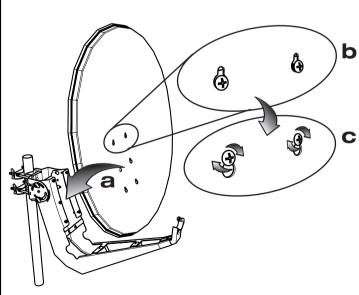

KF100FDB 18.07.2018 KF100FDG 18.07.2018 KF100FDR 18.07.2018

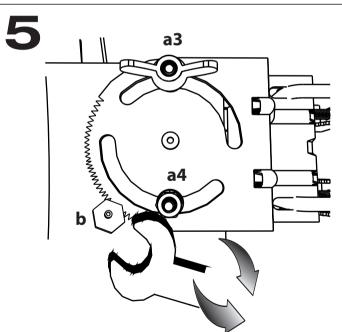

1-Loosen the a1-a2-a4 nuts, keep the a3 nuts at minimum tight just to avoid that the dish will falls down

2-Adjust fine tuning of the elevation by acting on the b nut of fig.5 with 17mm tool.

3-Found the best reception tighten all a nuts.

